
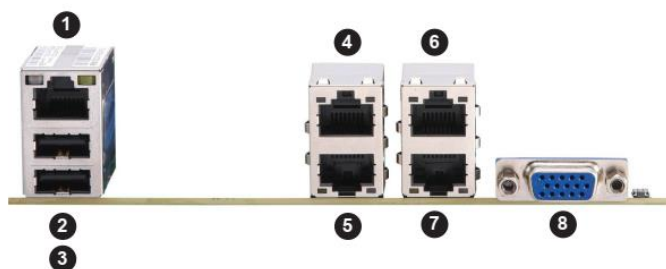


Modello: A3 Cluster – 4 porte 1 GbE

Schema apparato:

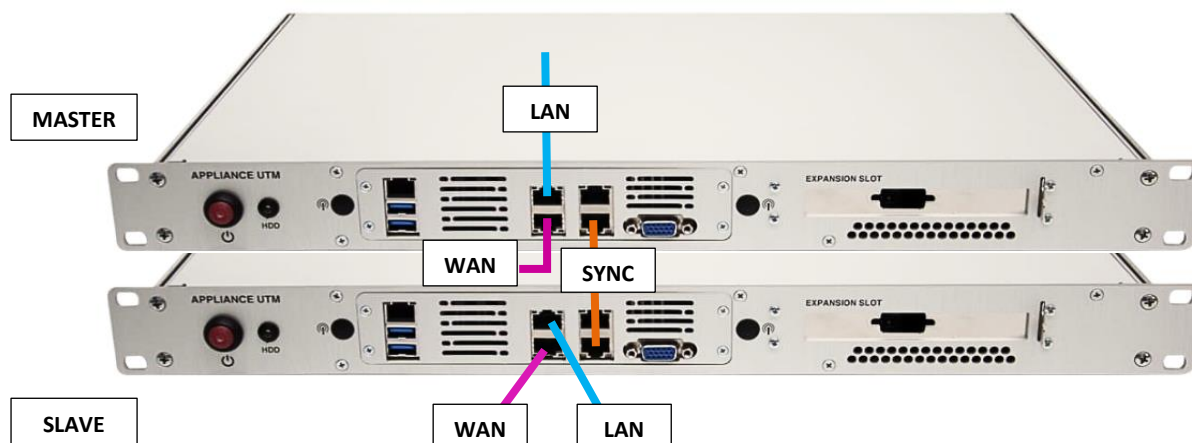

Rear I/O Ports			
#	Description	#	Description
1.	IPMI LAN	5.	LAN1
2.	USB1	6.	LAN4
3.	USB0	7.	LAN2
4.	LAN3	8.	VGA

Prima configurazione pfSense/OPNsense:

Master

Lan: 192.168.0.25
Wan: 192.168.131.25
GW: 192.168.131.1

Slave

Lan 192.168.0.26
Wan: 192.168.131.26
GW: 192.168.131.1

Carp Lan: 192.168.0.1

Carp Wan: 192.168.131.130

Dati di accesso:



	pfSense	OPNsense
username	admin	admin
password	pfsense	opnsense

Note:

- L'interfaccia IPMI di default è impostata in DHCP. Dopo aver collegato l'IPMI alla rete, l'indirizzo assegnato sarà visibile in fase di avvio dell'apparato. Lo username è ADMIN, la password è specifica per ogni apparecchiatura ed è riportata su un'etichetta collocata nella parte inferiore dell'apparato.

Model: A3 Cluster – 4 ports 1 GbE

Apparatus diagram:

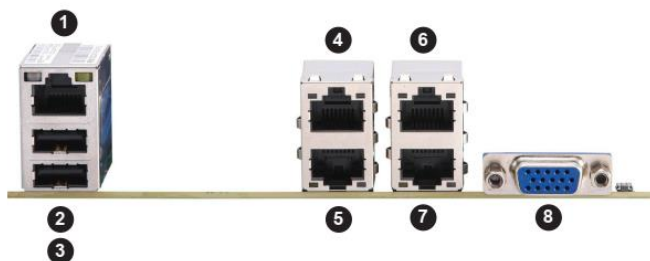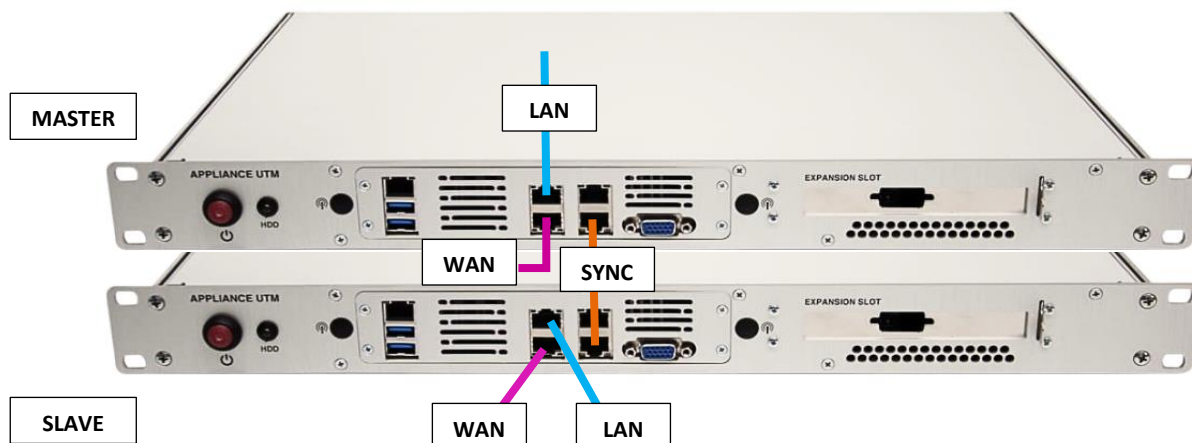

Rear I/O Ports			
#	Description	#	Description
1.	IPMI LAN	5.	LAN1
2.	USB1	6.	LAN4
3.	USB0	7.	LAN2
4.	LAN3	8.	VGA

First pfSense/OPNsense configuration:

Master

Lan: 192.168.0.25
Wan: 192.168.131.25
GW: 192.168.131.1

Slave

Lan 192.168.0.26
Wan: 192.168.131.26
GW: 192.168.131.1

Carp Lan: 192.168.0.1

Carp Wan: 192.168.131.130

Login information:

	pfSense	OPNsense
username	admin	admin
password	pfsense	opnsense

Note:

- The IPMI interface is set to DHCP by default. After connecting the IPMI to the network, the assigned address will be visible during the device startup. The username is ADMIN, the password is specific for each device and is reported on a label located on the bottom of the device.