



Model: nBox Mini Jet4 (4 porte 2,5 GbE)

Setup:

- assign your PC the IP address 192.168.160.11/24
- connect via network cable to the network interface identified by 1 in the diagram
- connect the power supply to the device
- access the following page via browser to configure the device: <http://192.168.160.10:9090>

Login information:

username	nbox
password	nbox

Note:

- The console port (COM) only allows access to the BIOS via serial, it does not allow installation of the OS.
- The equipment is fanless so the chassis heats up due to heat dissipation. It is important that it is installed in suitable environments, equipped with the correct ventilation.