


First Appliance Connection

- Set the IP address 192.168.131.2/24 on your PC
- Connect the LAN cable in the first left NIC (NIC1) near to the USB ports, as shown in the figure below

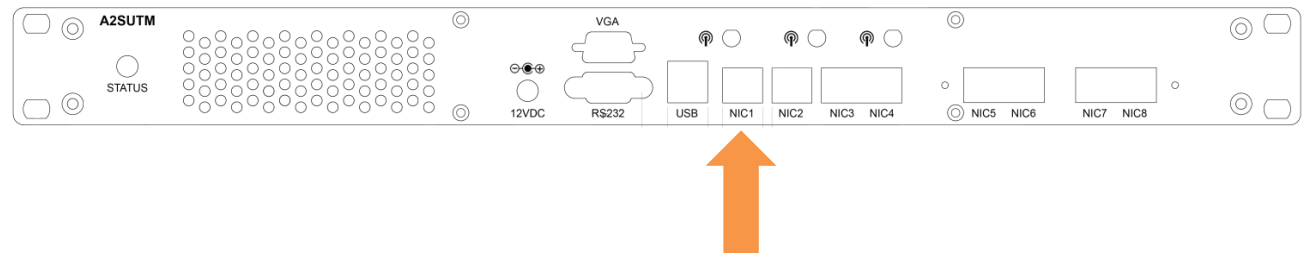

- Switch on the device by connecting it to the power supply
- You can have access to it at the web management using the below URL:
<https://192.168.131.254:8006>

Default access data:

Username: root

Password: proxmox


**PROXMOX
SMALL UTM 2**

support@miniserver.it

+39.011.198.23.940

Prima connessione all'apparato

- Assegnare al proprio PC l'indirizzo IP 192.168.131.2/24
- Collegarsi tramite cavo di rete alla prima NIC a sinistra (NIC1) vicino alle porte USB, come indicato nella figura sotto

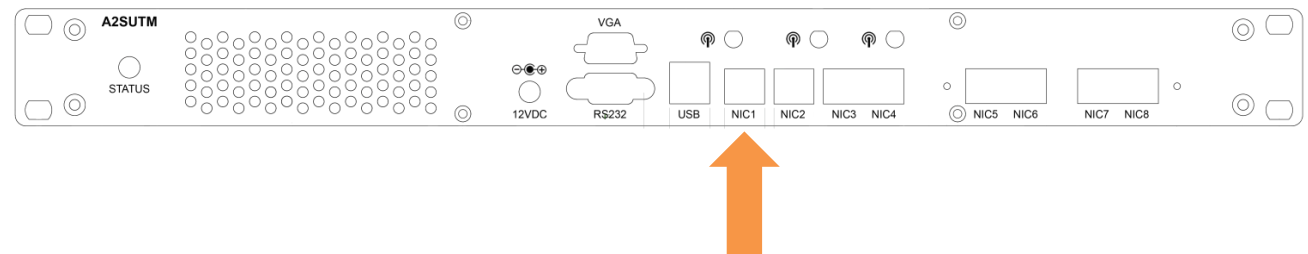

- Collegare l'alimentazione al dispositivo
- Accedere tramite browser alla seguente pagina per la gestione via web:
<https://192.168.131.254:8006>

Dati di accesso:

Username: root

Password: proxmox

**PROXMOX
SMALL UTM 2**

support@miniserver.it

+39.011.198.23.940